

NEC TV Operation

Turn on the TV using the ON button located on the bottom rear of the TV. The button is located directly behind the ON label at the bottom right of the TV.



Turning on the TV will automatically start the built-in PC.

To use the PC, first the TV must be set to INPUT - Option D.

To set the TV to this input press input button located on the bottom rear of the TV to cycle through all of the available inputs. The currently set input will be displayed as text on the top right corner of the TV. Remember to repeatedly press the input button until the TV displays INPUT – OPTION D text on the screen.



The TV and PC have now been set, use the provided mouse and keyboard to operate the PC.